

USAI RECESS PINHOLE SERVICE INSTRUCTIONS

CAUTION READ BEFORE INSTALLATION

- Retain these instructions for future reference. This product must be installed by a person familiar with the construction and operation of the product and the hazards involved, in accordance with applicable NEC code.
- Switch off main power before beginning installation.
- Install per national installation and accident prevention regulations.
- Clearance between sides of luminaire and parts of building to be 1/2 inch minimum; clearance to insulating materials to be 3 inch minimum, unless luminaire is IC rated.
- Fixtures must be installed in applications where the ambient temperature does not exceed 40° C during normal operation.
- DO NOT connect or disconnect LED board wire connector when the fixture is energized. This may result in permanent damage to the LED array.
- Warranty claims will not be accepted if incorrect driver or light engine is used.

 
 
 
DRIVER REPLACEMENT:

Caution: Power Must Be Off!!

1. Remove trim.
2. Unplug Quick-Connector.
3. Remove driver plate by pulling towards opening

4. Rotate driver plate.

5. Remove driver plate thru opening.
6. Unplug Quick-Connectors
7. Replace driver plate.
8. Install in reverse order.

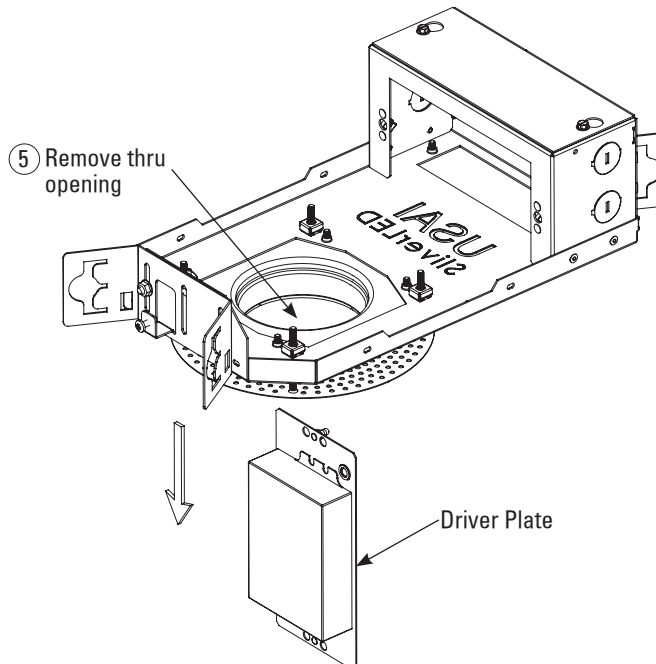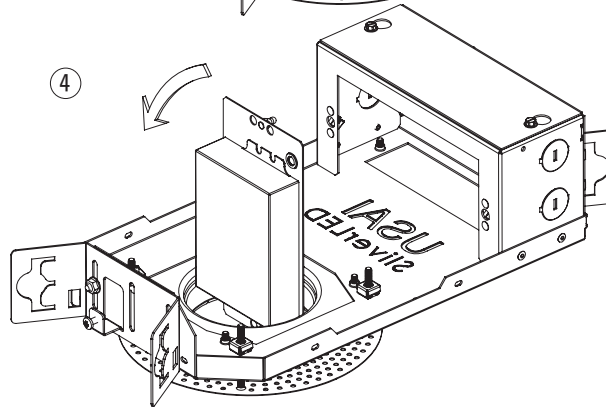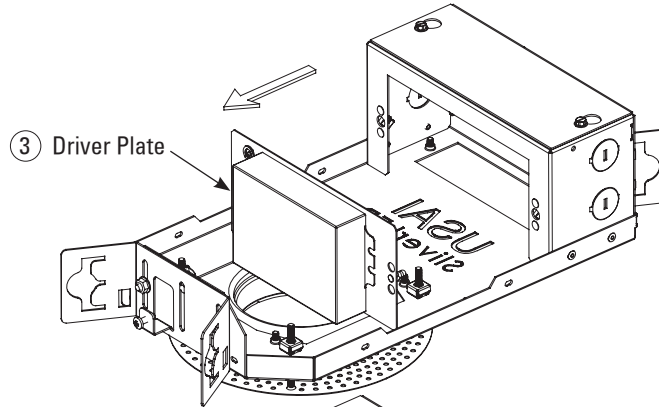

USAI RECESS PINHOLE SERVICE INSTRUCTIONS

 
CAUTION READ BEFORE INSTALLATION

- Retain these instructions for future reference. This product must be installed by a person familiar with the construction and operation of the product and the hazards involved, in accordance with applicable NEC code.
- Switch off main power before beginning installation.
- Install per national installation and accident prevention regulations.
- Clearance between sides of luminaire and parts of building to be 1/2 inch minimum; clearance to insulating materials to be 3 inch minimum, unless luminaire is IC rated.
- Fixtures must be installed in applications where the ambient temperature does not exceed 40° C during normal operation.
- DO NOT connect or disconnect LED board wire connector when the fixture is energized. This may result in permanent damage to the LED array.
- Warranty claims will not be accepted if incorrect driver or light engine is used.

REFLECTOR REPLACEMENT FOR DOWNLIGHT:

Caution: Power Must Be Off


1. Remove trim from housing.
2. Remove thumb screws (2X).
3. Remove heatsink assembly.
4. Remove reflector by pulling.
5. Install reflector by aligning pins to reflector receptacle and pushing into place.
6. Install heatsink assembly and secure with thumb screws (2X).
7. Make sure reflector is flush with glass.
8. Install trim into housing.

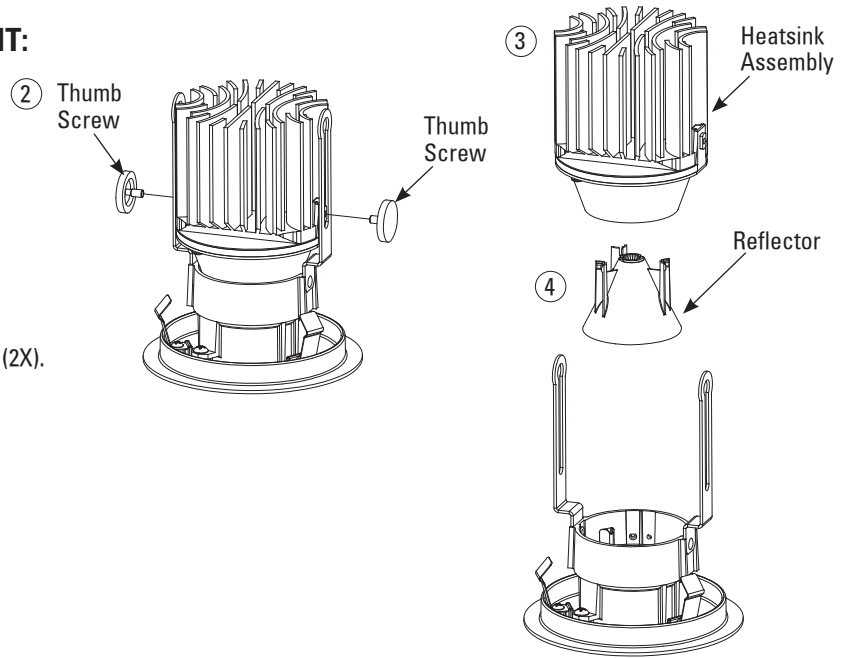

LIGHT ENGINE REPLACEMENT FOR DOWNLIGHT:

Caution: Power Must Be Off

 1. Loosen thumb screw (2X)
2. Lift and rotate heatsink assembly.
3. Remove reflector.
4. Remove cover mounting screws.
5. Remove cover.
6. Disconnect Light Engine.
7. Remove Light Engine mounting screws (3x).
8. Remove Light Engine holder.
9. Replace Light Engine.
10. Install remaining parts in reverse order.

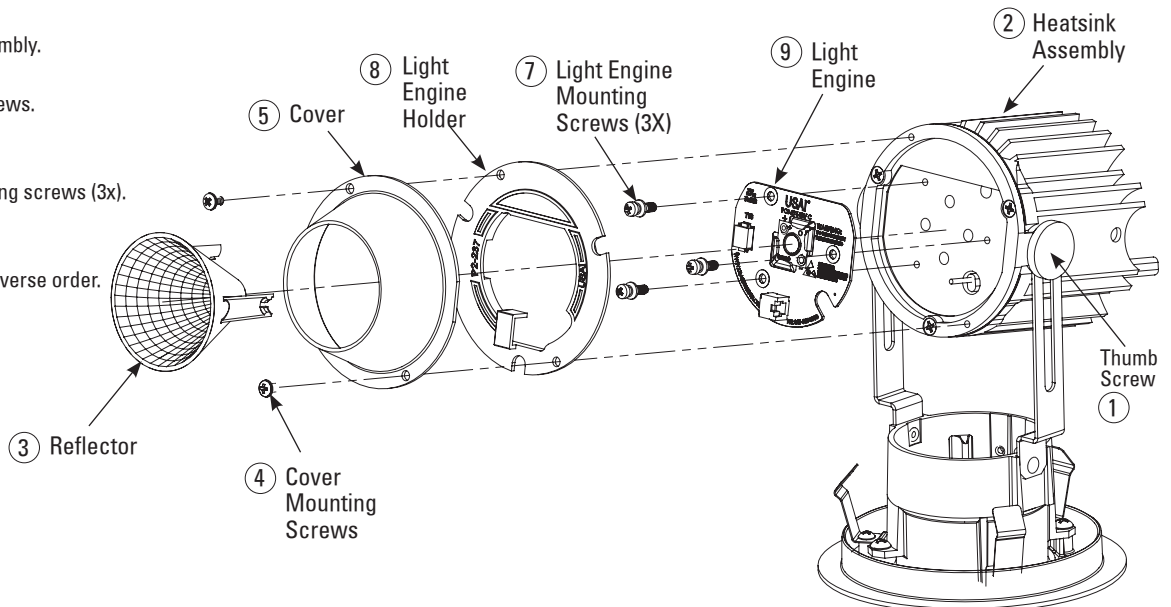

USAI RECESS PINHOLE SERVICE INSTRUCTIONS

 
CAUTION READ BEFORE INSTALLATION

- Retain these instructions for future reference. This product must be installed by a person familiar with the construction and operation of the product and the hazards involved, in accordance with applicable NEC code.
- Switch off main power before beginning installation.
- Install per national installation and accident prevention regulations.
- Clearance between sides of luminaire and parts of building to be 1/2 inch minimum; clearance to insulating materials to be 3 inch minimum, unless luminaire is IC rated.
- Fixtures must be installed in applications where the ambient temperature does not exceed 40° C during normal operation.
- DO NOT connect or disconnect LED board wire connector when the fixture is energized. This may result in permanent damage to the LED array.
- Warranty claims will not be accepted if incorrect driver or light engine is used.

OPTIC REPLACEMENT FOR ADJUSTABLE:

Caution: Power Must Be Off


1. Remove trim from housing.
2. Loosen thumb screws (2X).
3. Remove optic by pulling.
4. Install optic by aligning pins to optic holder receptacle and pushing into place.
5. Install heatsink assembly and secure with thumb screws (2X).
6. Make sure optic is flush with glass.
7. Install trim into housing.

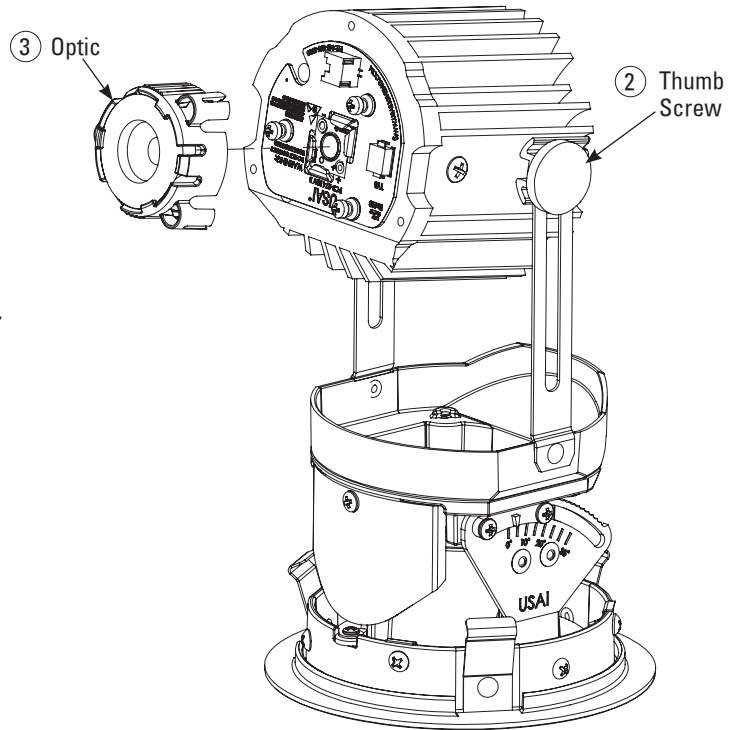

LIGHT ENGINE REPLACEMENT FOR ADJUSTABLE:

Caution: Power Must Be Off

 1. Loosen thumb screw (2X)
2. Lift and rotate heatsink assembly.
3. Remove optic.
4. Disconnect Light Engine.
5. Remove Light Engine mounting screws (3x).
6. Remove Light Engine Holder.
7. Replace Light Engine.
8. Install remaining parts in reverse order.

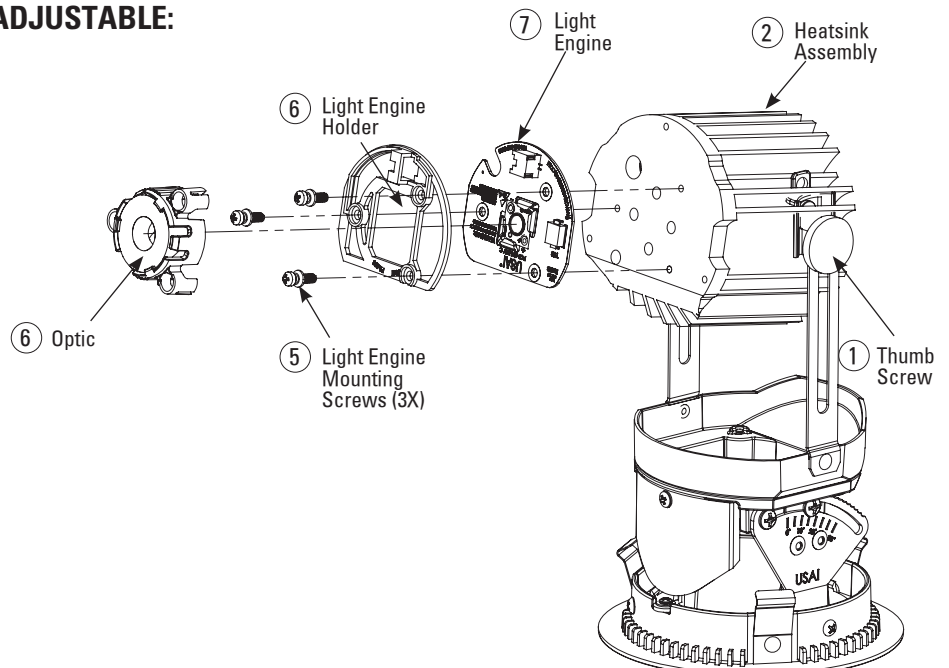

USAI RECESS PINHOLE SERVICE INSTRUCTIONS

 
CAUTION READ BEFORE INSTALLATION

- Retain these instructions for future reference. This product must be installed by a person familiar with the construction and operation of the product and the hazards involved, in accordance with applicable NEC code.
- Switch off main power before beginning installation.
- Install per national installation and accident prevention regulations.
- Clearance between sides of luminaire and parts of building to be 1/2 inch minimum; clearance to insulating materials to be 3 inch minimum, unless luminaire is IC rated.
- Fixtures must be installed in applications where the ambient temperature does not exceed 40° C during normal operation.
- DO NOT connect or disconnect LED board wire connector when the fixture is energized. This may result in permanent damage to the LED array.
- Warranty claims will not be accepted if incorrect driver or light engine is used.

LENS REPLACEMENT FOR WALL WASH:

Caution: Power Must Be Off


1. Remove trim from housing.
2. Remove thumb screws (2X).
3. Remove heatsink assembly.
4. Remove mounting screw.
5. Remove mounting clip.
6. Replace lens.
7. Install mounting clip and secure with mounting screw.
8. Install heatsink assembly and secure with thumb screws (2X).
9. Make sure reflector is flush with glass.
10. Install trim into housing.

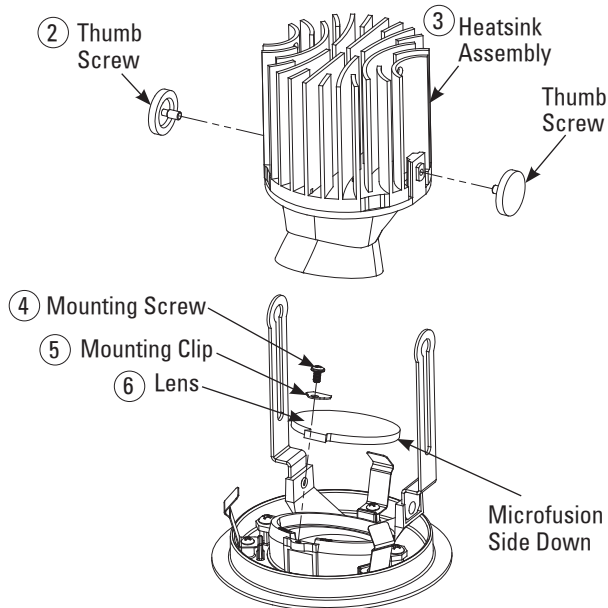

REFLECTOR REPLACEMENT FOR WALL WASH:

Caution: Power Must Be Off

 1. Remove trim from housing.
2. Loosen thumb screws (2X).
3. Remove reflector by pulling.
4. Install reflector by aligning to reflector holder and pushing into place.
5. Install heatsink assembly and secure with thumb screws (2X).
6. Make sure reflector is flush with lens.
7. Install trim into housing.

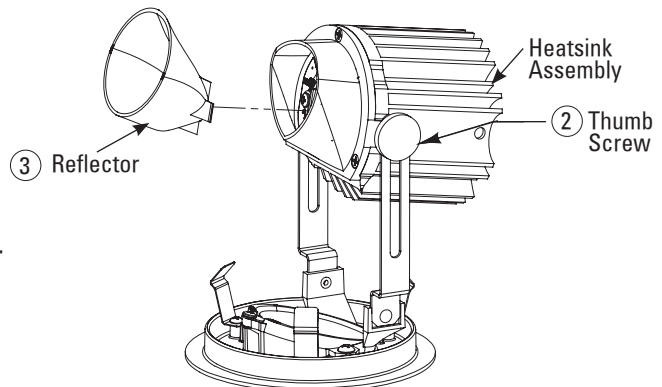

LIGHT ENGINE REPLACEMENT FOR WALL WASH:

Caution: Power Must Be Off

1. Loosen thumb screw (2X)
2. Lift and rotate heatsink assembly.
3. Remove reflector.
4. Remove cover mounting screws.
5. Remove cover.
6. Disconnect Light Engine.
7. Remove Reflector-holder mounting screws (3x).
8. Remove reflector-holder.
9. Replace Light Engine.
10. Install remaining parts in reverse order.

